


Stereo Cassette Deck

Operating Instructions

TC-K870ES

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

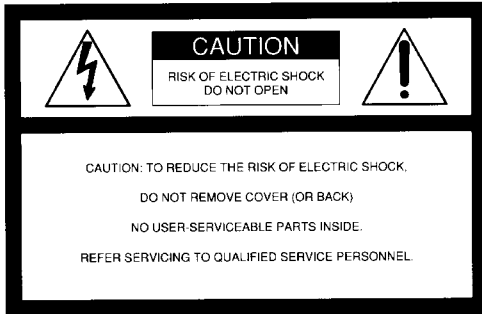

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

* The graphical symbols are on the rear enclosure.

INFORMATION

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna
 - Relocate the equipment with respect to the receiver
 - Move the equipment away from the receiver
 - Plug the equipment into a different outlet so that equipment and receiver are on different branch circuits.
- If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful:
"How to Identify and Resolve Radio-TV Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington, DC 20402, Stock No. 004-000-00345-4.

Owner's Record

The model and serial numbers are located at the rear. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. TC-K870ES Serial No. _____

Table of Contents

Getting Started

Features	3
Precautions	4
Installation	4
Connections	5
Identification of front panel parts	6

Playback

Playing back	7
Locating a selection	
— Automatic Music Sensor (AMS)	8
Playing back automatically after rewinding	
— Auto Play	8
Locating a desired position using the counter	
— Memory Play	9
— The accuracy of the linear counter	9

Recording

Recording	10
Adjusting the recording level	11
Recording FM Broadcasts with the Dolby NR system ..	11
Monitoring the recorded sound	11
Making an optimum recording according to the	
tape type	12
Bias and recording level calibration	12
Recording equalization calibration	13
To protect a recording	14
What is the Dolby HX PRO system?	14
Inserting a blank space during recording	
— Record Muting	15

Timer-Activated Playback and Recording

Timer-activated playback and recording	15
--	----

Maintenance	16
Specifications	17
Troubleshooting guide	18

Features

For higher quality recording/playback

- **The Dolby HX PRO* system** which improves the linearity of the tape's high-range response during recording.
- **B and C type Dolby NR* systems** which reduce tape noise.
- **Bias and recording level calibration** which ensures optimum recording conditions to bring out the best in every tape.
- **Three-head system (separate recording, playback and erase heads)** which allows you to instantly check the recorded sound while recording is in progress.

For your convenience

- **The AMS and Memory Play functions** which provide easy access to a desired selection.
- **Timer-activated playback and recording** through the use of an optional timer.

For easier operation

- **Easy-to-read digital linear counter** which shows the elapsed recording or playing time.

* Dolby noise reduction and HX Pro headroom extension manufactured under license from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen.

"DOLBY", the double-D symbol  and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

Precautions

On safety

- Operate the unit only on 120 V AC, 60Hz.
- Before operating the unit, be sure that the operating voltage of your unit is identical with that of your local power supply.
- Should any solid object or liquid fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it will not be used for a long time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.

On operation

- When the unit is not used, turn the power off to conserve energy and to extend the useful life of your unit.
- Because of a safety mechanism, the function buttons will not operate if the cassette holder is not completely closed, if there is no cassette in the cassette holder, or if a cassette has been incorrectly inserted into the cassette holder.

On head cleaning

The head and tape path should be cleaned after every ten hours of operation. Dirty heads and a dirty tape path may cause:

- loss of high-frequency response
- loss of sound volume
- sound drop-out

If you have any questions or problems concerning your unit, please contact your nearest Sony dealer.

For detailed safety precautions, see the leaflet "IMPORTANT SAFEGUARDS".

Installation

Notes on Installation

- Place the unit with the front panel facing you in a location with adequate air circulation to prevent overheating of the unit.
- Do not place the unit:
 - near heat sources such as radiators or air ducts.
 - in places subject to direct sunlight, excessive dust, mechanical vibration or shock.
 - in an inclined position.
 - on a rug or other soft surfaces that would block the ventilation holes on the bottom of the unit.

Detaching the Side Panels

For the model with side panels which are detachable

After removing the screws, secure the cabinet with the supplied lock screws (M3x4). Do not use the longer screws. For safety, before doing this, be sure to disconnect the AC power cord from the AC outlet.


Do not throw away the carton and the packing material

They will come in handy when transporting the unit or shipping it for servicing.


Connections

Notes on Connections


- Turn off the power to all equipment to be connected before making any connection.
- Note that the red plug of the supplied connecting cord is for right-channel (R) connection and the white plug for left-channel (L) connection.
- The connecting cords should be fully inserted into the jacks. A loose connection may cause hum pickup.

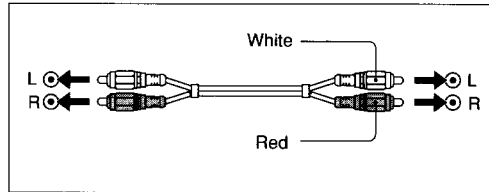

Basic Connection

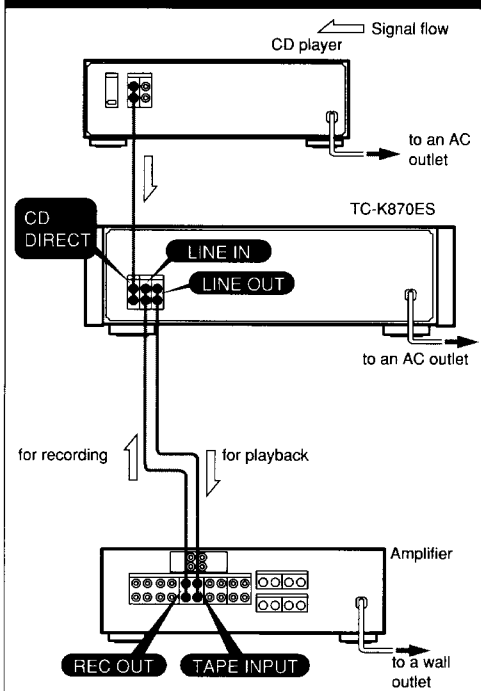


Connection for Tape Dubbing

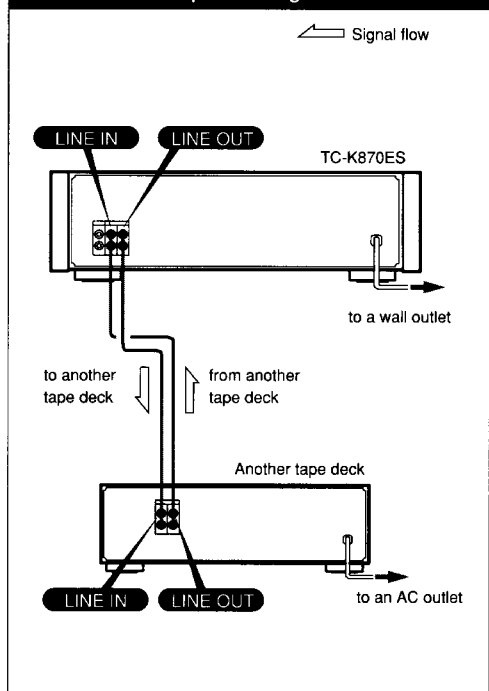

Note on the CD DIRECT input terminal

Connecting a CD player or a DAT deck to the CD DIRECT input allows the sound signal of the connected unit to be directly input to the unit. Since this shortens the signal path, the result is higher sound quality. However, due to the shortened signal path, the BALANCE knob and MPX filter are rendered inoperative during input from the CD DIRECT input. If your CD player is equipped with two sets of outputs, connect one set to the amplifier and the other to the CD DIRECT input of this unit. You may then use the INPUT button to switch between CD DIRECT input or line input to suit your recording needs.

Identification of Front Panel Parts

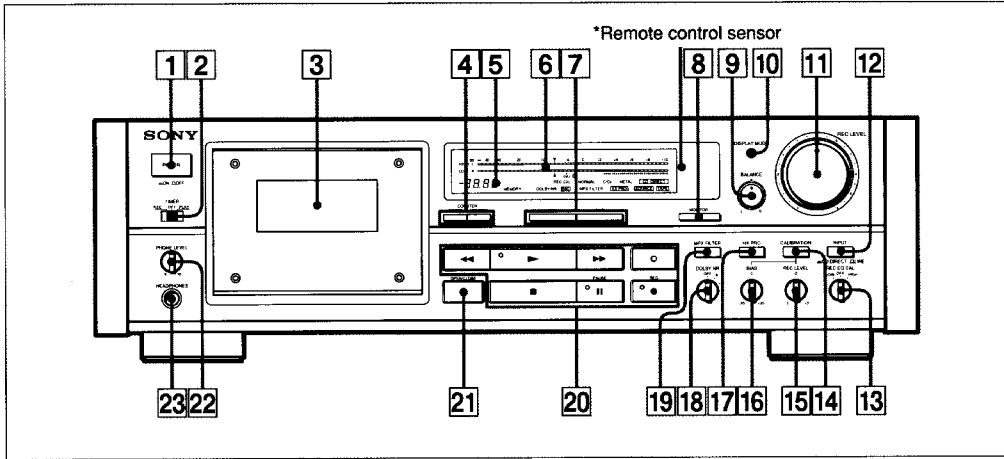



For details, refer to the page number indicated in ●.

- 1 POWER switch
- 2 TIMER switch ●
- 3 Cassette holder
- 4 COUNTER buttons
RESET button ●
MEMORY button ●
- 5 LINEAR COUNTER ●
- 6 PEAK PROGRAM METER ●
- 7 AMS (Automatic Music Sensor) buttons ●

*Remote control sensor

You can remotely control this cassette deck with:


- A remote commander that came with a Sony amplifier or receiver if it has the  mark and cassette deck control capability.
- An optional Sony remote commander with the  mark and cassette deck control capability.

- 8 MONITOR button ● ●
- 9 BALANCE control ●
- 10 DISPLAY MODE button
- 11 REC (recording) LEVEL control ● ●

- 12 INPUT button ●
- 13 REC EQ CAL (recording equalizing calibration) switch (LOW, NORMAL, HIGH) ●
- 14 CALIBRATION button ●
- 15 REC (recording) LEVEL control for calibration ●
- 16 BIAS control ● ●
- 17 HX PRO button ●
- 18 DOLBY NR (noise reduction switch)
- 19 MPX FILTER button ●
- 20 Tape operation buttons and indicators
◀ (rewind) button
▶ (play) button and indicator
▶▶ (fast-forward) button
○ REC MUTE (record muting) button ●
■ (stop) button
|| PAUSE button and indicator
● REC (recording) button and indicator
- 21 ▲ OPEN/CLOSE button
- 22 PHONE (headphones) LEVEL control
- 23 HEADPHONES jack (stereo phone jack) ●


Playing Back

Follow the procedure below to play back a cassette.

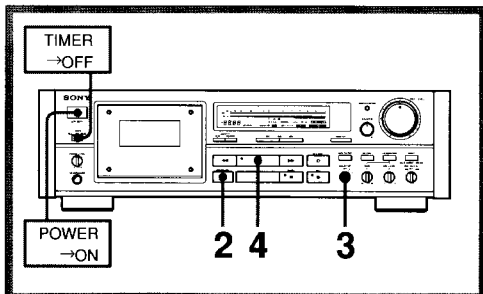

1 Turn on the amplifier and select the tape function.


2 Insert a cassette.

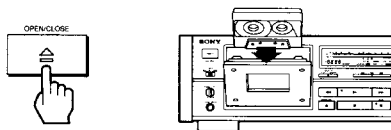

3 Set DOLBY NR to the same position that was used when the cassette was recorded.



4 Start playback.



To stop playback, press the ■ button.

To stop playback momentarily, press the || button.

To restart playback, press the || or ► button.

To fastwind a tape rightward, press the ►► button.

To fastwind the tape leftward, press the ◀◀ button.

Selecting the display mode

You may choose among three display modes by pressing the DISPLAY MODE button: (1) all indications are displayed; (2) only the counter is displayed; or (3) no display.

The TIMER switch must be set to OFF

Otherwise, recording or playback will start automatically when the power is turned on.

Is it necessary to set the tape type being used?

No. The deck has an automatic tape type detection system.

To start operations while the cassette holder is open

Operations may be started while the cassette holder is open. For example, when the ► button is pressed while the cassette holder is open, the cassette holder will close and playback will start.

Similarly, pressing the ◀◀, ►►, or || buttons while the cassette holder is open will close the cassette holder and start the respective operation.

To change to recording mode during playback

Keeping the ► button pressed, press the ● button. The unit immediately switches from playback to recording without stopping the tape. This is useful when editing previously recorded material.

For headphone listening

Connect the headphone plug to the PHONES jack. The listening level can be controlled with the LEVEL control.

Is it necessary to set the MONITOR button for playback?

No. The TAPE mode is automatically selected and TAPE is displayed.

What is Dolby NR system?

The Dolby NR (noise reduction) system reduces tape hiss noise in low-level, high-frequency signals by boosting the signals during recording and lowering them during playback.


Note

The Dolby HX Pro system is effective only during recording, not during playback.

Locating a Selection

— Automatic Music Sensor (AMS)

The AMS function detects the blank space between selections, allowing you to quickly locate the beginning of desired selections.

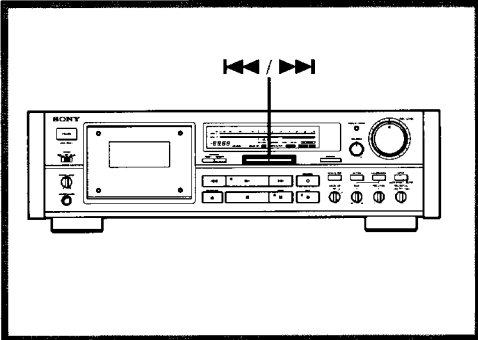


During playback, press ►► or ◀◀ referring to the following table.

Desired selection	
Next selection	Selection being played
►►	◀◀


The PLAY indicator flashes while the AMS searches for the beginning of the selection. After locating the beginning of the selection, playback will start automatically.

Playing Back Automatically after Rewinding — Auto Play

The Auto Play function automatically starts playing back a cassette after fast winding it to the beginning.

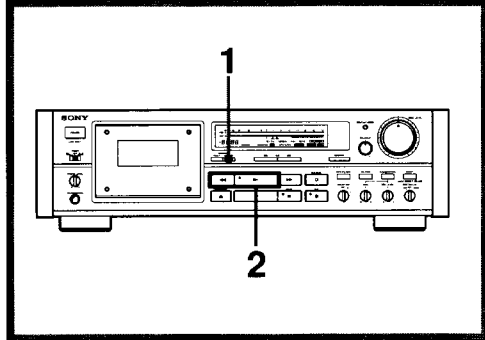


1



Make sure the MEMORY indicator is off. If it is not, press MEMORY.

2

While pressing ◀◀, press ►.



The AMS may skip a selection in the following cases:

- If the ►► (or ◀◀) button is pressed immediately before the following selection.
- If there is noise in the space between selections.
- If the space is less than four seconds long.


The AMS will treat the following as blanks:

- a long pause in the music
- a passage of low frequencies or very low volume
- a gradual increase or decrease in volume


Locating a Desired Position Using the Counter

— Memory Play


The Memory Play function allows you to use the counter to record a desired position on a cassette for fast relocation and automatic playback later.

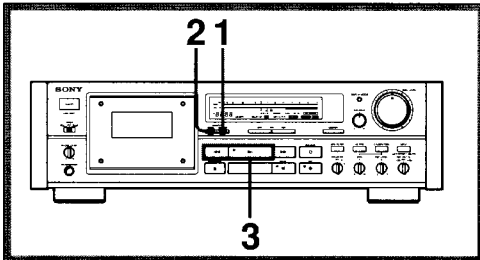

1 Activate the Memory Play function.




2 At the desired position, reset the counter.



The desired position is memorized.

3 To return to the desired position While pressing ◀◀, press ▶▶.



Returning to the memorized position in stop mode — Memory stop

If you press only the ◀◀ button when the MEMORY indicator is on in the stop mode, the tape rewinds and the unit stops when the counter reaches 0.00.

To deactivate the Memory Play function

Press the MEMORY button, turning off the MEMORY indicator.

The Accuracy of the Linear Counter

Since the counter is not a digital clock, the number will differ from the actual elapsed playback or recording time by a few minutes, depending on such factors as tape length and hub size.

Note on Memory Play/Stop


In actuality, the tape is rewound to slightly short of 0.00.

Do not turn off the power while using the counter


Turning the power off, then on again resets the counter to 0.00.

Recording

Follow the procedure below to record a source on a cassette.

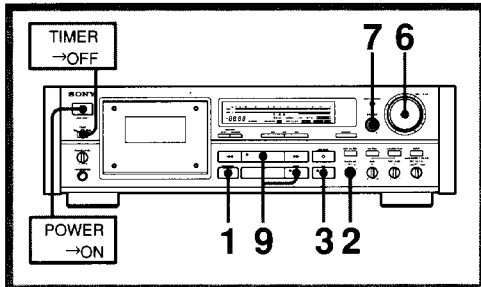


1 Insert a cassette.



2 Select the Dolby NR setting.




3 Place the unit into recording pause mode.



4 To record the CD program source through the CD DIRECT input terminal, set INPUT to CD DIRECT.

5 Play the program source to be recorded.

6 Adjust the recording level.

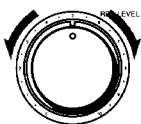

See **Adjusting the Recording Level** on page 11.


7 Adjust the balance.

(If CD DIRECT is selected in step 4, the BALANCE control is rendered inoperative.)



8 Restart the program source, if required.

9 Start recording.



To stop recording

Press the ■ button.

Regarding CD direct input

Connecting a CD player directly to the CD DIRECT terminals will result in a higher quality recording. However, when the INPUT button is set to CD DIRECT, the BALANCE control and MPX filter are rendered inoperative.

Recording with the Dolby HX Pro system

Press the HX PRO button to turn on the Dolby HX PRO function. Use the MONITOR switch to verify the effects of the function.

If playback starts instead of recording

The cassette tab has been removed. To record on this cassette, cover the hole with plastic tape. (See page 14.)

The TIMER switch must be set to OFF

Otherwise, recording or playback will start automatically when the power is turned on.

Is it necessary to set the MONITOR button for recording?

No. The source mode is automatically selected and SOURCE is displayed. If you wish to monitor the recorded sound, press the MONITOR button to select the TAPE mode.

To start recording while the cassette holder is open

If you press the ● button while the cassette holder is open, the holder will close automatically and the unit will switch to recording pause mode. This function allows you to start recording at a moment's notice.

Checking the recording time on a tape

To check the remaining recording time on a tape:

- 1 Press the RESET button to reset the counter to 0.00.
- 2 Press ►► to advance the tape to its end. The number on the counter shows the approximate recording time.


To check the total recording time of a tape, first rewind the tape to its beginning, then follow the same steps as above.

Adjusting the Recording Level

The optimum recording level, which differs according to the tape type, is indicated on the PEAK PROGRAM METER for each tape type.

Adjust the REC LEVEL control as high as possible without exceeding the recommended range for the tape type being used.

Recommended maximum PEAK PROGRAM METER reading

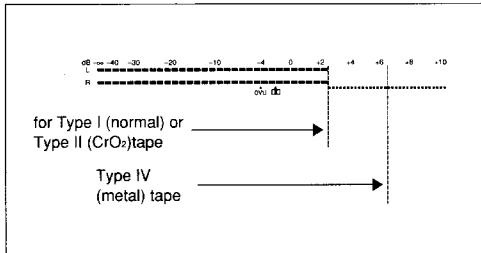

Tips on recording level adjustment

- If the recording level setting is too high, the recording will be distorted; if it is too low, the tape will produce a hissing sound. Therefore, the recording level should be set as high as possible without causing distortion.
- If the program source to be recorded has many high frequency signals, set the level to a relatively low position.

Recording FM Broadcasts with the Dolby NR System

When recording FM broadcasts with the DOLBY NR system, set the MPX FILTER button to ON (the "FILTER" indicator appears).

The MPX filter eliminates remnants of the 19-kHz stereo carrier and 38-kHz subcarrier signals which may impair the operation of the DOLBY NR system. Be sure that the Dolby NR switch is turned on since the MPX filter will not function otherwise. During recording with the Dolby NR system, use this button only if the tuner is not equipped with its own MPX filter or the equipped filter does not function effectively.

Monitoring the Recorded Sound


As this unit has three separate heads for recording, playback and erasure, you can check the quality of a recorded sound by comparing it with the input source signal.

To listen to the input source signal, set the MONITOR button to SOURCE.

To listen to the sound recorded on the tape, set the MONITOR button to TAPE.

While recording, use this monitoring function to check that there is no distortion due to excessive level settings or sound degradation due to head contamination.


MONITOR button setting and signal flow

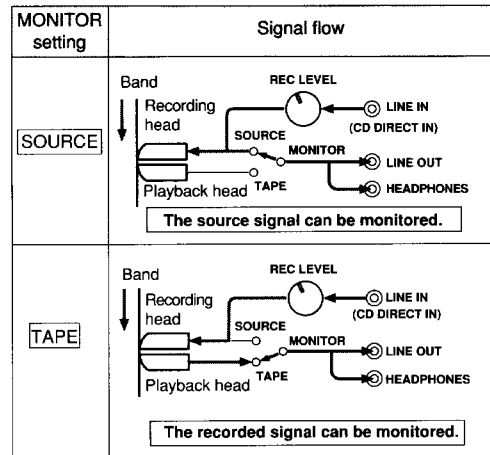

Making an Optimum Recording According to the Tape Type


Bias and Recording Level Calibration

There are many different types of cassettes on the market, each with varying magnetic properties. Although your unit is equipped with the ATS (Automatic Tape Selection) system which sets the appropriate equalization characteristics and bias current for each tape type, an additional calibration adjustment can often produce even better results. Use the bias current and recording level calibration function to obtain the optimum recording conditions for your tape.

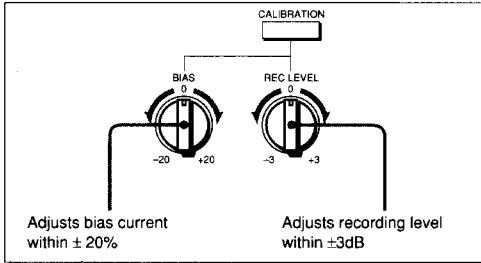

Bias calibration


Choosing the optimum bias current for a tape ensures minimum distortion and flat frequency response. Lowering the bias current boosts high-frequency response, but also results in higher distortion. Raising the bias, on the other hand, reduces distortion, but also dampens high-frequency response. Optimum bias is thus obtained when the bias current and high-frequency response are well balanced.

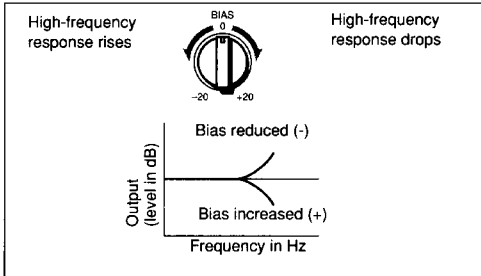


- If the bias current is higher or lower than the optimum setting for a certain tape, the frequency response changes as shown in the chart above. Changing the bias can thus be used to tailor the response to your liking, for example by slightly emphasizing the upper or lower end.
- The frequency response of metal tapes is much less affected by changes in the bias current than other tape types. With some tapes, the adjustment range of this deck ($\pm 20\%$) may therefore not be sufficient to cover every possible requirement.

Recording level calibration


Even when the recording level is adjusted correctly, using a tape with low sensitivity will result in a low playback level. The REC LEVEL calibration control allows you to compensate for sensitivity differences among tapes to equalize both recording and playback levels. This is especially important when using the Dolby NR system, since it is most effective when recording and playback levels are the same.

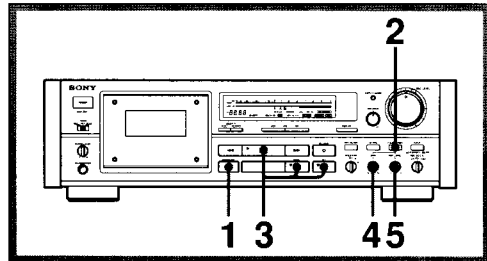


1 Insert the cassette to be used for recording.

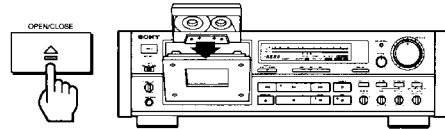

2 Press CALIBRATION.

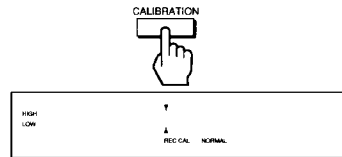

3 Activate the recording test tones:

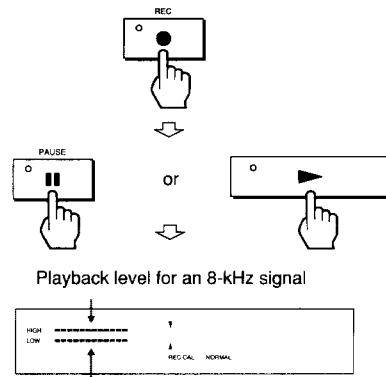


It takes 2 to 3 seconds to stabilize the test tone level.

Recording Equalization Calibration


4 Adjust BIAS until both meters indicate equal playback levels.

A high reading on the upper meter indicates a low bias current.


A low reading on the upper meter indicates a high bias current.

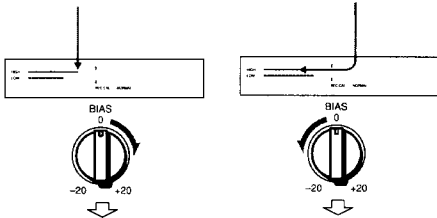

An equal reading on both meters indicates the optimum bias current condition.

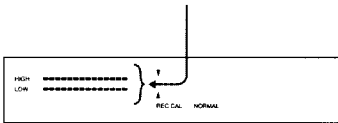

5 Adjust REC LEVEL CALIBRATION until both meters reach the recommended level (REC CAL).

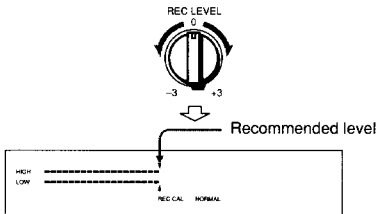

The bias current is now adjusted to the optimum level and the tape sensitivity compensation has been set. Press **■**, then set CALIBRATION to OFF. Rewind the tape and start the actual recording.


Note

The sound cannot be monitored during the calibration operation.

Although bias current and equalization are automatically set by the Automatic Tape Selection (ATS) function for the tape being used, you can use the REC EQ CAL switch to change the recording characteristics according to the nature of the source material or to compensate for the particular characteristics of the tape.

Bias Calibration Recording

To modify bands of sound as required, use the REC EQ CAL switch in conjunction with bias calibration, which enables you to record according to the tape's characteristics. Set the REC EQ CAL switch as follows:

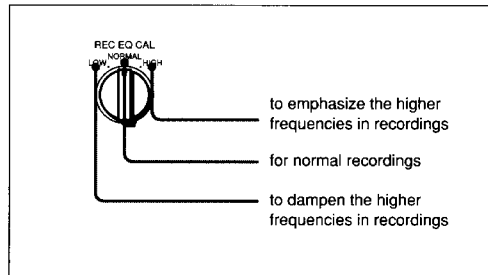

- **When recording music which has strong middle and low frequencies**

Set the bias at flat with the REC EQ CAL switch set in the HIGH position to increase the bias current.

Adjust BIAS so that the HIGH and LOW meters indicate equal readings. (See the diagrams on the left.)

- **When recording music which has strong high frequencies**

Set the bias at flat with the REC EQ CAL switch set in the LOW position to decrease the bias current.

Adjust BIAS so that the HIGH and LOW meters indicate equal readings. (See the diagrams on the left.)

Note

With metal tape, because the amount of frequency characteristic modulation is not in proportion to that of the bias, the optimum bias current may not be obtained using the methods above.


Another use of the REC EQ CAL switch

When using a special tape, the BIAS control with the REC EQ CAL switch set in the NORMAL position may not cause the HIGH and LOW meters to indicate equal readings. If this occurs, adjust the BIAS control after setting the REC EQ CAL switch to HIGH or LOW.


Recording

To Protect a Recording



To protect a recording on side A or B
Break out the respective tab.

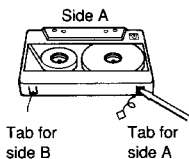

To recover a cassette for recording
Cover the respective slot with tape.



When using Type II (CrO₂) or Type IV (metal) cassettes
Be careful not to cover the detector slots which are necessary for automatic tape detection.

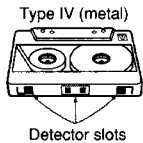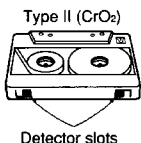

Cassette care


- Avoid touching the tape surface of a cassette to prevent contamination of the heads by dirt, dust, or oil on the skin.
- Keep cassettes away from equipment with magnets, such as speakers and amplifiers, as erasure or distortion on the recorded tape could occur.
- Do not expose cassettes to direct sunlight, extremely cold temperatures or moisture.

Note on cassettes longer than 90 minutes


The use of cassettes longer than 90 minutes is not recommended except for long continuous playback.

What is the Dolby HX PRO System?

The Dolby HX PRO system provides improved linearity in high-range frequency response during recording. Tapes recorded with this system retain the same high quality even when played back on other tape decks.

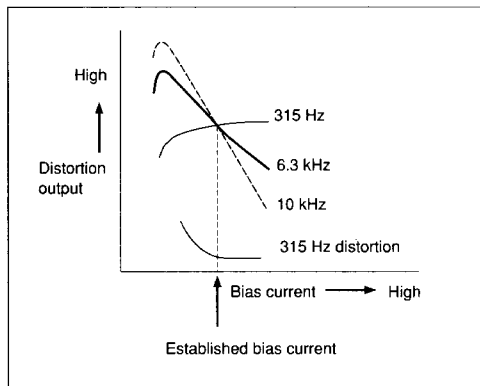

As shown above, characteristics such as output level and distortion differ widely according to the bias (high-frequency) current. In conventional systems, the bias current is susceptible to variations in certain recording signals (see diagram below) which may cause fluctuations in frequency response, distortion, or other unwanted characteristics.

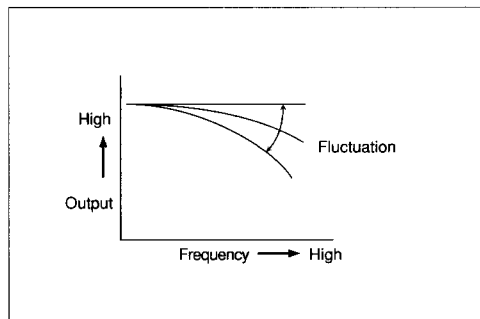


With the Dolby HX PRO system, the effective bias amount added to the bias current is controlled in millisecond units to greatly reduce distortion, improving linearity in high-range response and ensuring high-intensity recording with minimal distortion and noise.

Inserting a Blank Space during Recording

—Record Muting

The Record Muting function allows you to insert a four-second blank to enable proper AMS operation (see page 8), and to replace unwanted input with a blank of any desired length.

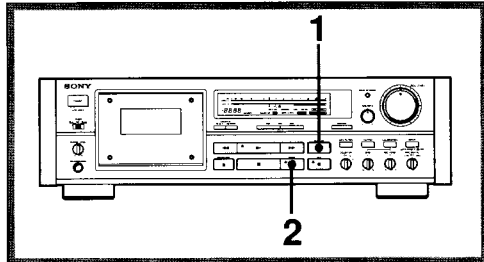


- 1** While recording, press **REC MUTE** and release it immediately.



The REC indicator starts to blink. During this time, no incoming signals are recorded on the tape. After four seconds, the **PAUSE** indicator lights up and the unit enters recording pause mode.

- 2** Resume recording.




To create a blank longer than four seconds

Press the **REC MUTE** button for the desired length of time. After four seconds, the REC indicator blinks with greater rapidity. When you release the **REC MUTE** button, the **PAUSE** indicator lights up and the unit goes into recording pause mode. Press the **PAUSE** button to resume recording.

Timer-Activated Playback and Recording

By connecting an optional timer, recording or playback can be performed automatically at a preset time.

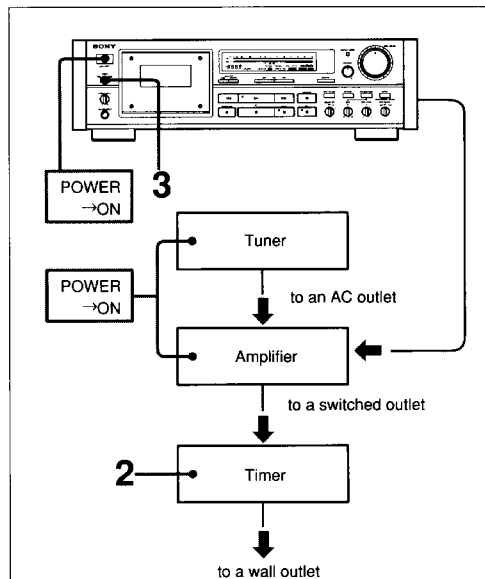

- 1** Prepare the unit for playback or recording.

For playback	Follow steps 1 through 3 on page 7.
For recording	Follow steps 1 through 7 on page 10.

Close the holder completely.

- 2** Set the timer to the desired time.
Power to the tape deck will be cut off.

- 3** Set the deck's **TIMER** switch to **PLAY** or **REC**.
Playback or recording will start at the preset time.

Keep the POWER switch on the unit on

When the timer is set, the power to the unit will be cut off. However, the POWER switch must be on to start timer-activated operation.

When the timer-activated operation is completed

Set the **TIMER** switch on the unit to **OFF**. If the **TIMER** switch is left at **REC**, the unit will automatically start recording the next time the power is turned on, and the previously recorded material may be erased.

Maintenance


Cleaning the Heads and Tape Path

Clean all surfaces over which the tape travels after every ten hours of operation to guard against:

- low-quality sound
- a decrease in sound level
- excessive wow, flutter or drop-out
- incomplete erasure
- impairment of recording function

To obtain high-quality recorded sound, cleaning before every recording is recommended.

- 1 With the unit turned off, hold down the **▲** button and press the POWER button. This causes the holder to open, the heads to rise and the pinch roller to rotate.
- 2 Wipe the heads, the pinch rollers and the capstans with a cotton swab slightly moistened with alcohol or a commercially available cleaning fluid for tape decks. Clean the entire surface of the pinch rollers and capstans while they are rotating, making sure that the cotton swab does not get caught in the mechanism.
- 3 When completed, press the **▲** button again.

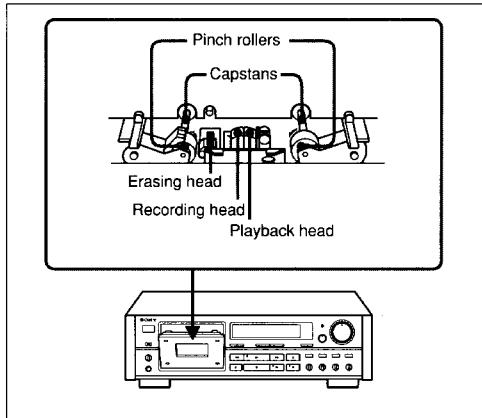

Do not insert a cassette until the cleaned areas are completely dry.

Demagnetizing the Heads

After 20 to 30 hours of use, or when you notice hiss and/or loss of high frequencies, the residual magnetism built up on the heads should be removed.

- 1 Turn off the power.
- 2 Demagnetize the heads with any commercially available demagnetizer.

Refer to the instruction manual of the demagnetizer for detailed instructions.

Cleaning the Cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvents such as alcohol or benzene.

Specifications

Recording system	4-track 2-channel stereo
Fast-winding time	Approx. 90 sec. (with Sony C-60 cassette)
Bias	AC bias
Heads	Erasing head × 1 (LA head) Recording head × 1 (LA head) Playback head × 1 (LA head)
Motors	Capstan motor × 1 (direct-drive linear torque BSL motor) Reel motor × 1 (DC motor)
Wow and flutter	±0.04% W.Peak (IEC) 0.024% WRMS (NAB) ±0.065% W.Peak (DIN)

Supplied accessories

Audio connecting cord (2)
Screws (4)

Design and specifications subject to change without notice.

Signal-to-noise ratio (NAB, at peak level)

Cassette	Dolby NR switch	OFF	B-Type ON	C-Type ON
	Type IV (Sony METAL-SLT)		61dB	70 dB
Type II (Sony UX-S)		59 dB	68 dB	74 dB
Type I (Sony HF-S)		57 dB	66 dB	72 dB

Total harmonic distortion

1.0%(with Sony METAL-SLT cassette)

Frequency response (DOLBY NR OFF)

Type IV cassette (Sony METAL-SLT)	15–22,000 Hz (±3 dB) 15–16,000 Hz (±3 dB 0VU recording)
Type II cassette (Sony UX-S)	15–20,000 Hz (±3 dB)
Type I cassette (Sony HF-S)	15–17,000 Hz (±3 dB)

Inputs

Line inputs (phono jacks) CD DIRECT input (phono jacks)	Sensitivity	77.5 mV
	Input impedance	47 k ohms

Outputs

Line outputs (phono jacks)	Rated output level	0.44 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	0–2.5 mW at a load impedance of 32 ohms

General

Power requirements	Model for U.S.A and Canada: 120 V AC, 60 Hz
Power consumption	23 W
Dimensions	Approx. 470 × 135 × 350 mm (w/h/d) (18 ⁵ / ₈ × 5 ³ / ₈ × 13 ⁷ / ₈ inches) including projecting parts and controls
Weight	Approx. 7.9 kg (17 lbs 7 oz)

Troubleshooting Guide

The following trouble checks will help you correct the most common problems encountered with your tape deck. Should any problems persist after you have made these checks, consult your nearest Sony dealer.

Before proceeding with these trouble checks, verify that:

- The power cord is firmly connected.
- Amplifier connections are firmly made.
- Heads, capstans and pinch rollers are clean.
- The amplifier controls and switches are set correctly.

Function buttons and tape transport problems		
Symptom	Cause	Remedy
The function buttons do not activate.	The cassette is not properly inserted.	Insert cassette correctly.
	Button was pressed immediately after the power was turned on.	Wait until the II indicator stops blinking.
Playback or recording begins when the power is turned on.	The TIMER switch is not set to OFF.	Set the TIMER switch to OFF.
The ● button does not activate.	There is no cassette in the holder.	Insert a cassette.
	A tab has been removed from the cassette.	Cover the slot with tape (page 14).
Automatic shut-off mechanism activates before the tape comes to its end.	The tape is slack.	Take up the tape slack.
	The cassette shell is deformed.	Use another cassette.
	The Memory Play function is activated.	Press the MEMORY button to deactivate the function.
Excessively loud tape transport noise during fast winding.	This noise is caused by the cassette and does not signify a mechanical problem.	—
The cassette holder will not close.	There has been a power failure or the power cord has been disconnected while the cassette holder is open.	Reconnect the power.
The ▲ button does not function.	There has been a power failure or the power cord has been disconnected.	Reconnect the power.

Recording and playback problems		
Symptom	Cause	Remedy
Recording or playback cannot be made or there is a decrease in sound level.	The heads are either dirty or magnetized.	Clean or demagnetize the heads.
	Improper connection.	Make connections properly (page 5).
	Improper setting of the amplifier controls.	Set the amplifier controls to the appropriate positions.
	The CALIBRATION button is set to ON.	Set the CALIBRATION button to OFF.
Excessive wow, flutter or drop-out.	The head, capstan or pinch roller is dirty.	Clean in accordance with instructions (page 16).
Incomplete erasure.	The erasing head is dirty.	Clean the erasing head.
Increased noise or poor reproduction in high frequencies.	The head is magnetized.	Demagnetize the head.
Unbalanced tone in high frequencies.	Improper setting of the DOLBY NR switch.	During playing back, set the switch to the same position used in recording.
	The unit is placed near a television set.	Move the unit away from the television set.
The desired selection cannot be located even though you activate the AMS.	There is noise in the space between selections. The space is less than four seconds long.	Rerecord the tape if you can, and insert a blank space of four seconds using the ○ button.
	The ▶▶ or ◀◀ button was pressed immediately before the beginning of the following selection.	—
Playback begins in the middle of the selection when the AMS is activated.	The selection contains one of the following: — a long pause in the music — a passage of low frequencies or very low volume — a gradual increase or decrease in volume.	While the tape is playing, press the ▶▶ or ◀◀ button again.

Noise		
Symptom	Cause	Remedy
Hum noise.	The unit is stacked on or under the amplifier.	Separate the unit.
Noise is recorded.	The recording was made near equipment such as a television set or a color monitor, and interference has affected the recording on the tape and the Dolby NR system.	Move the unit away from the television set or color monitor.